 



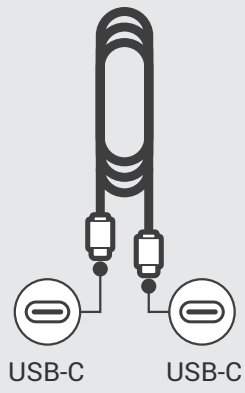


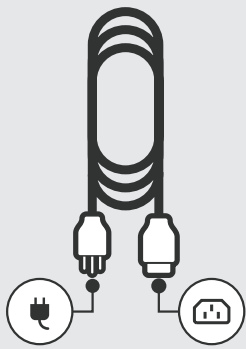





## Dell 34 Plus USB-C Monitor


S3425DW

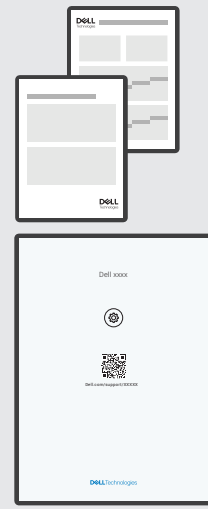


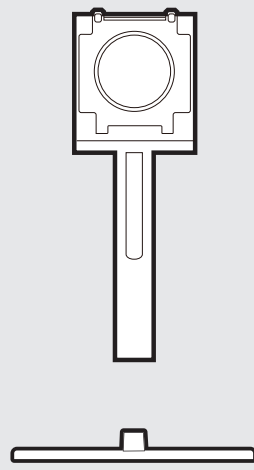


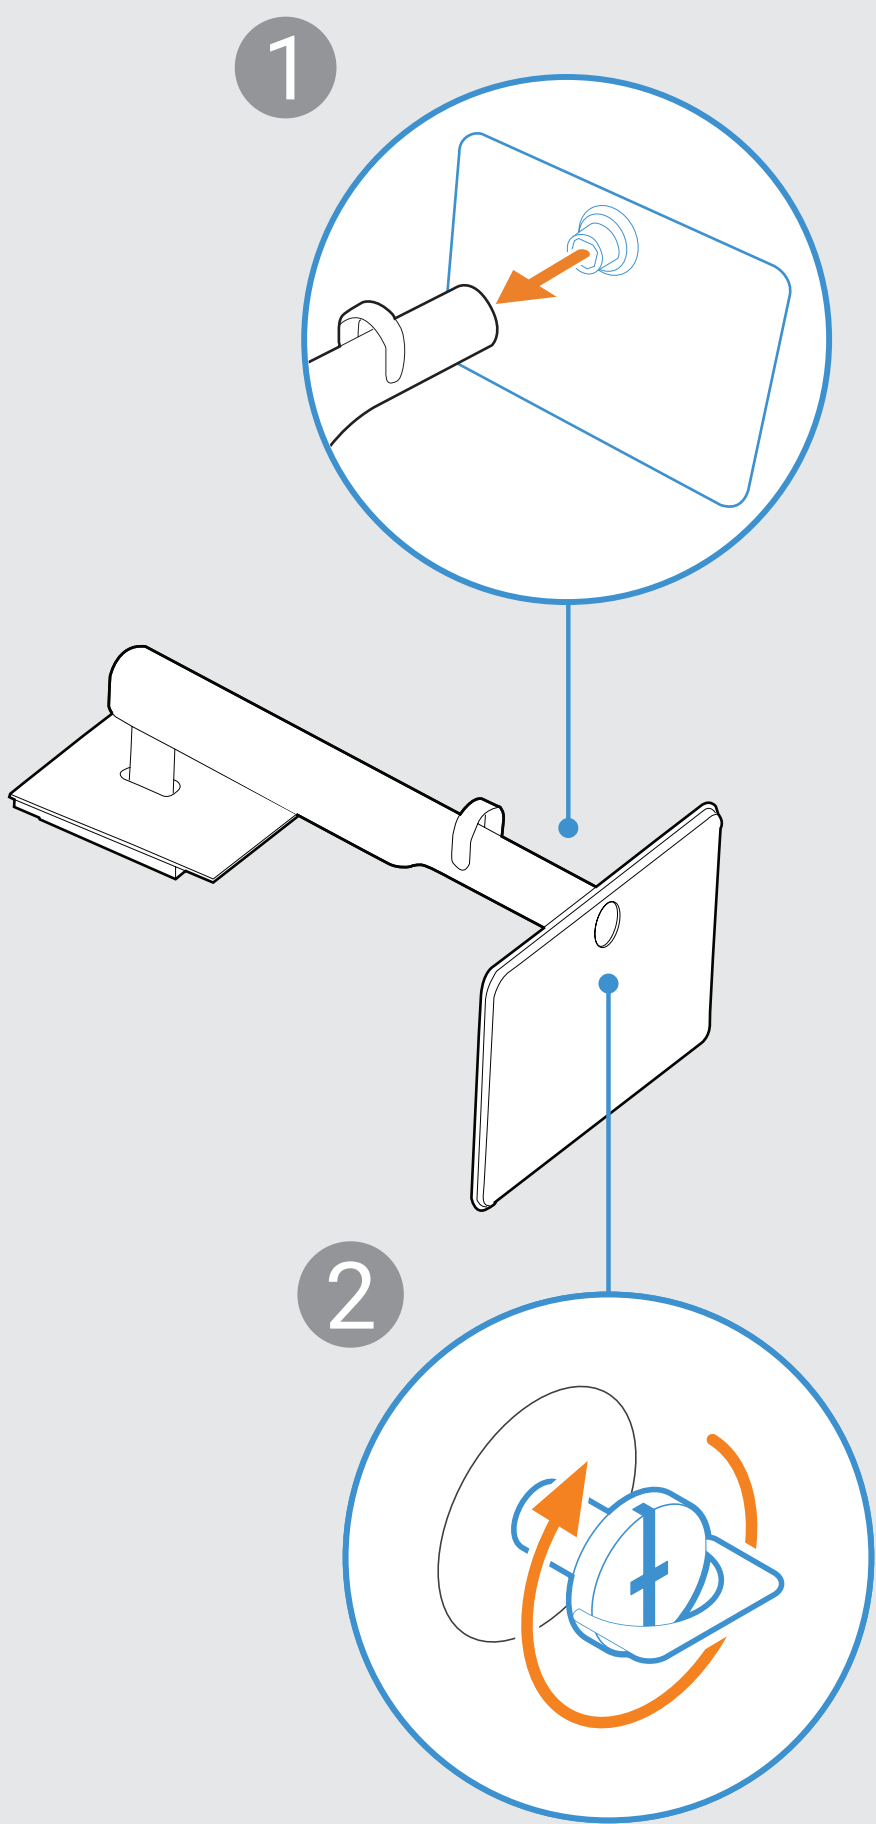


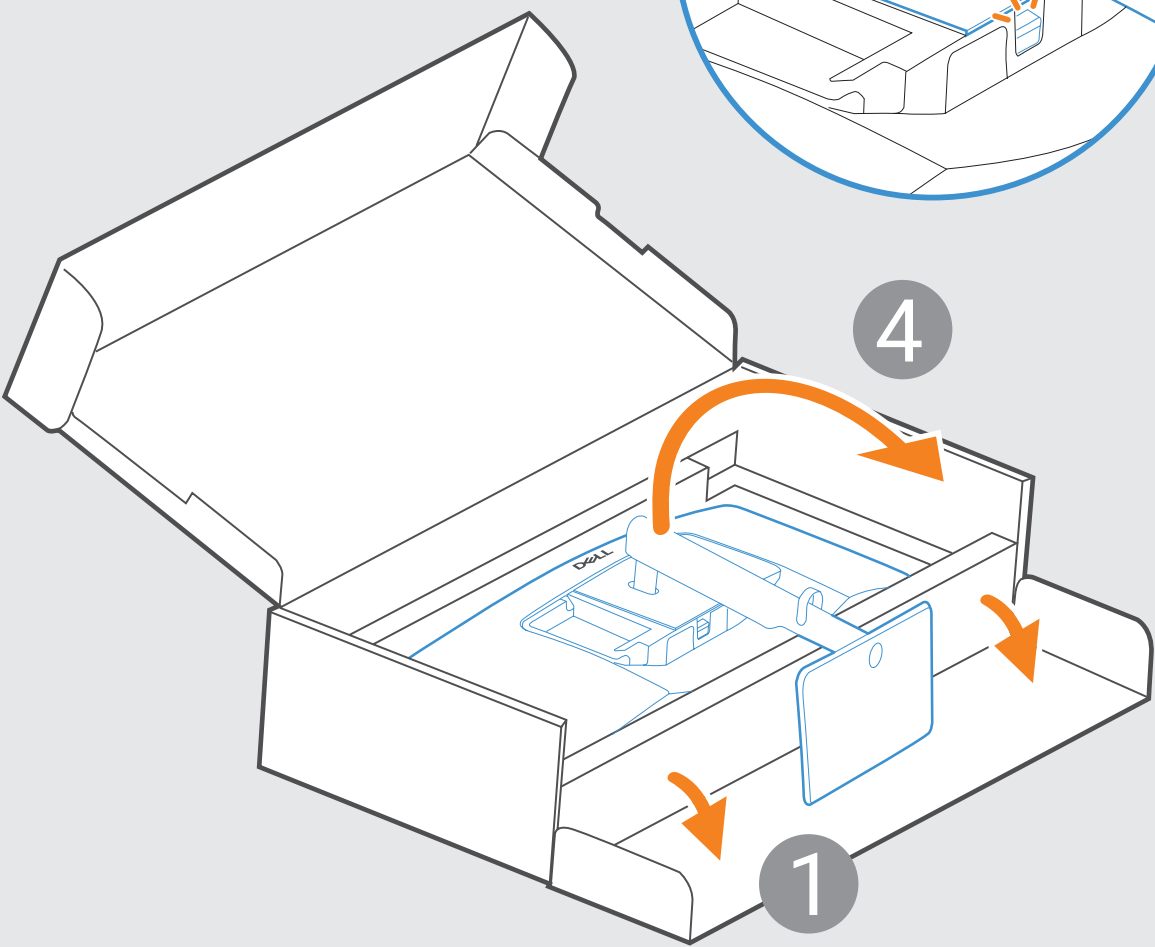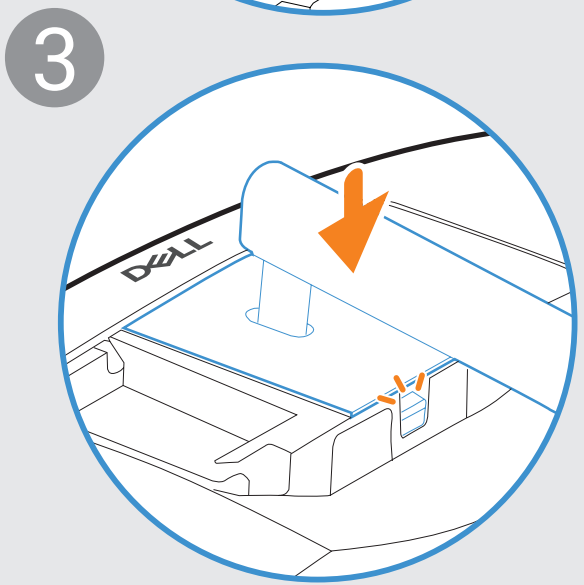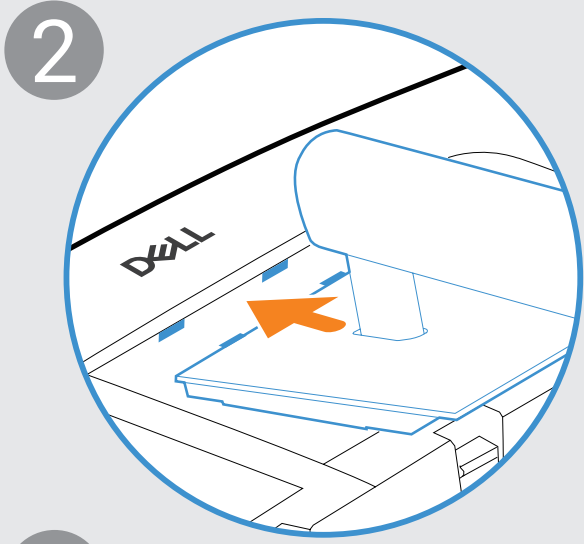


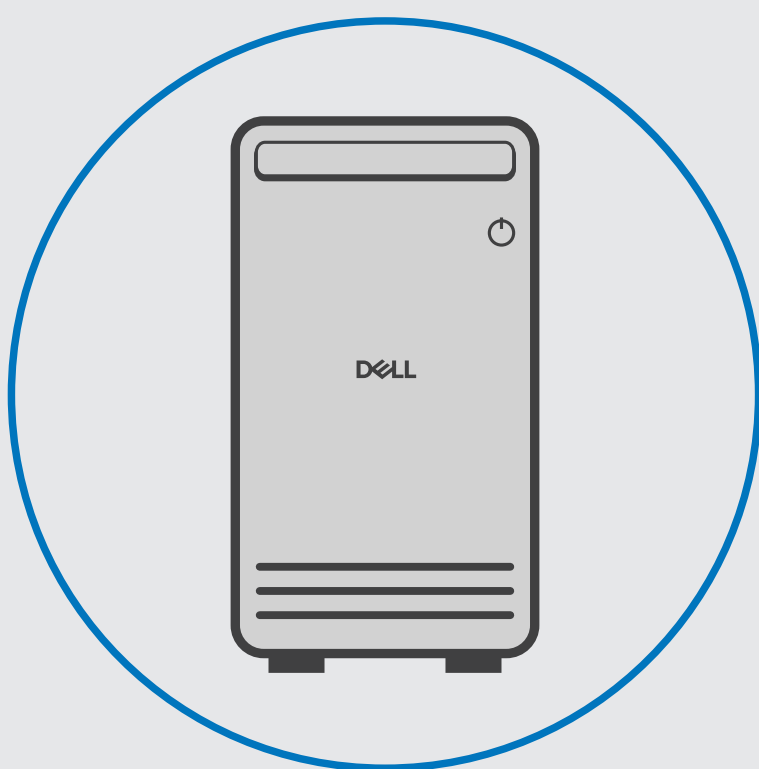



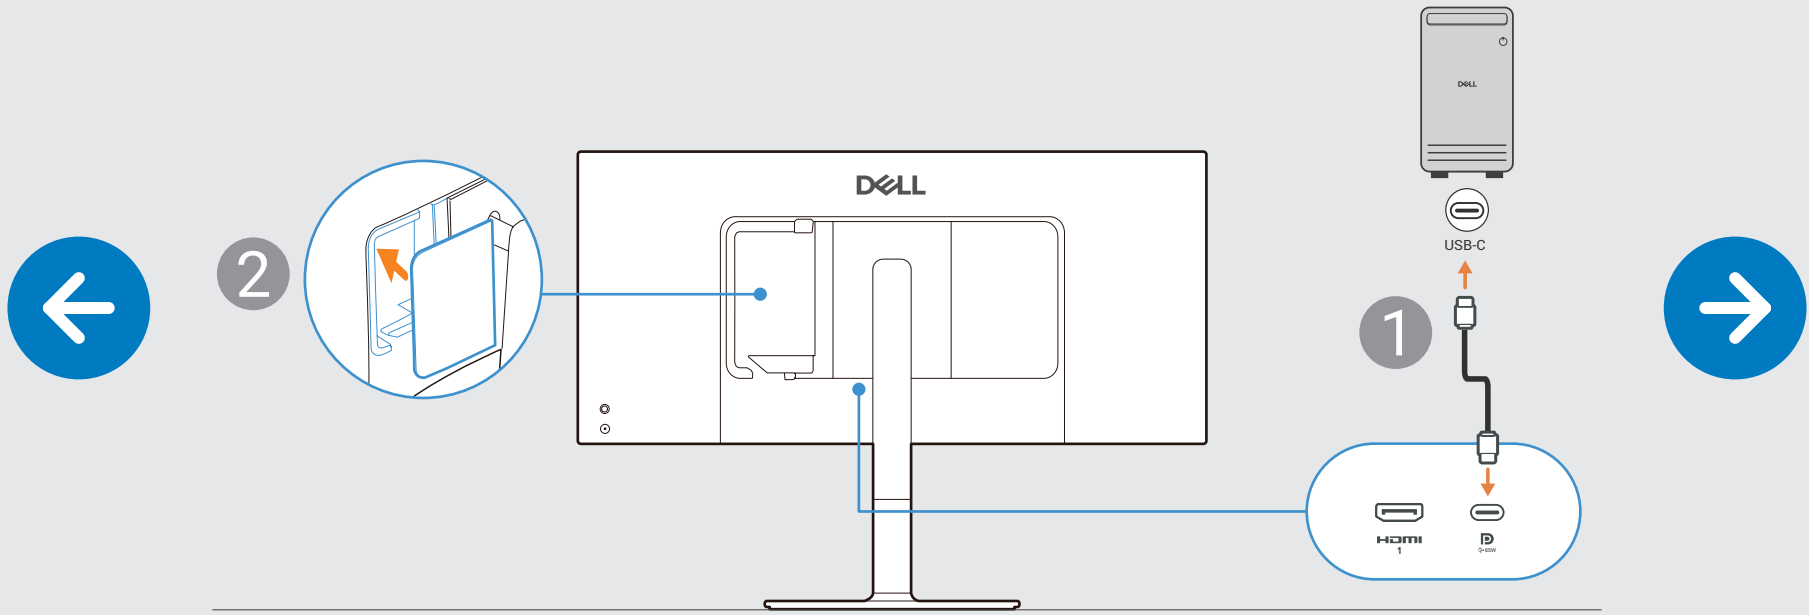


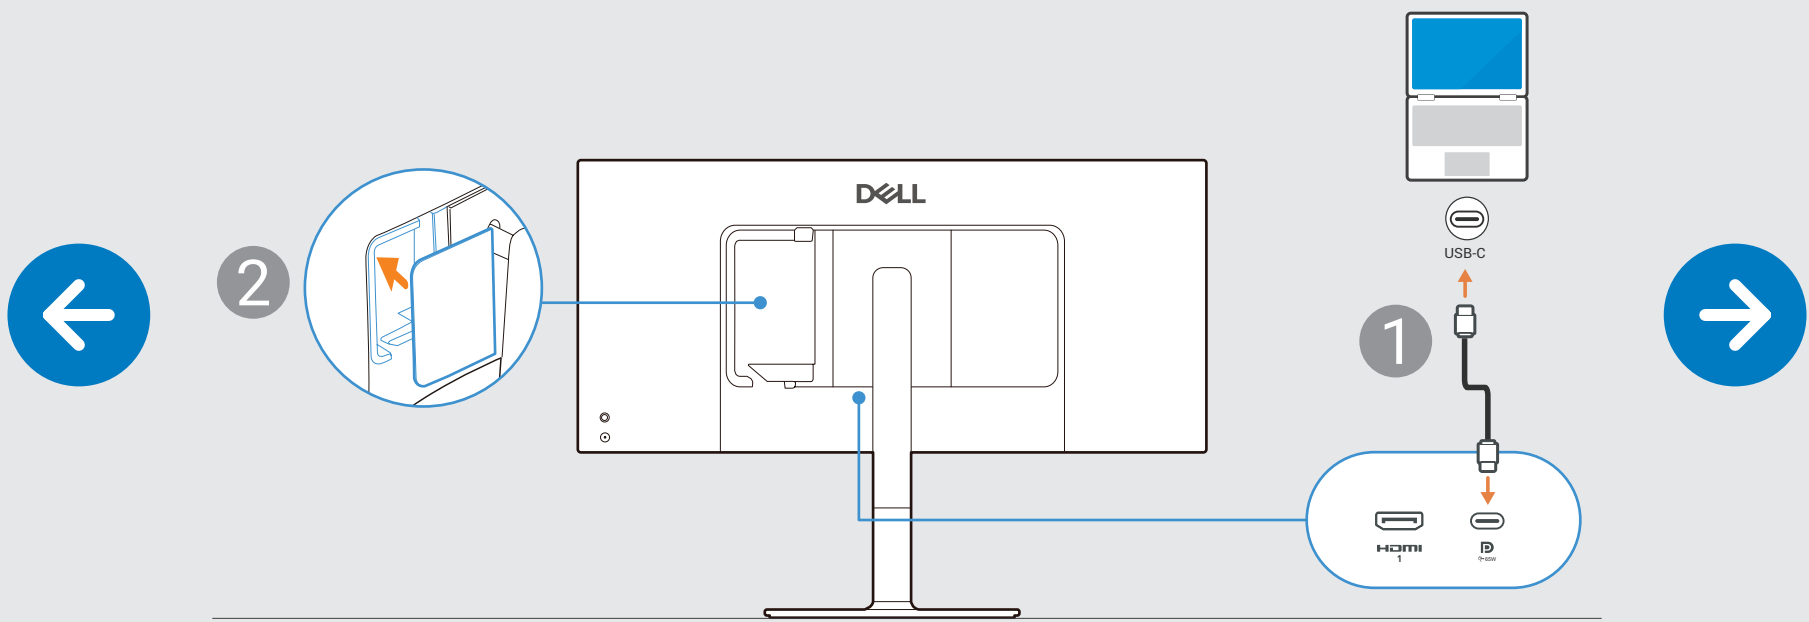


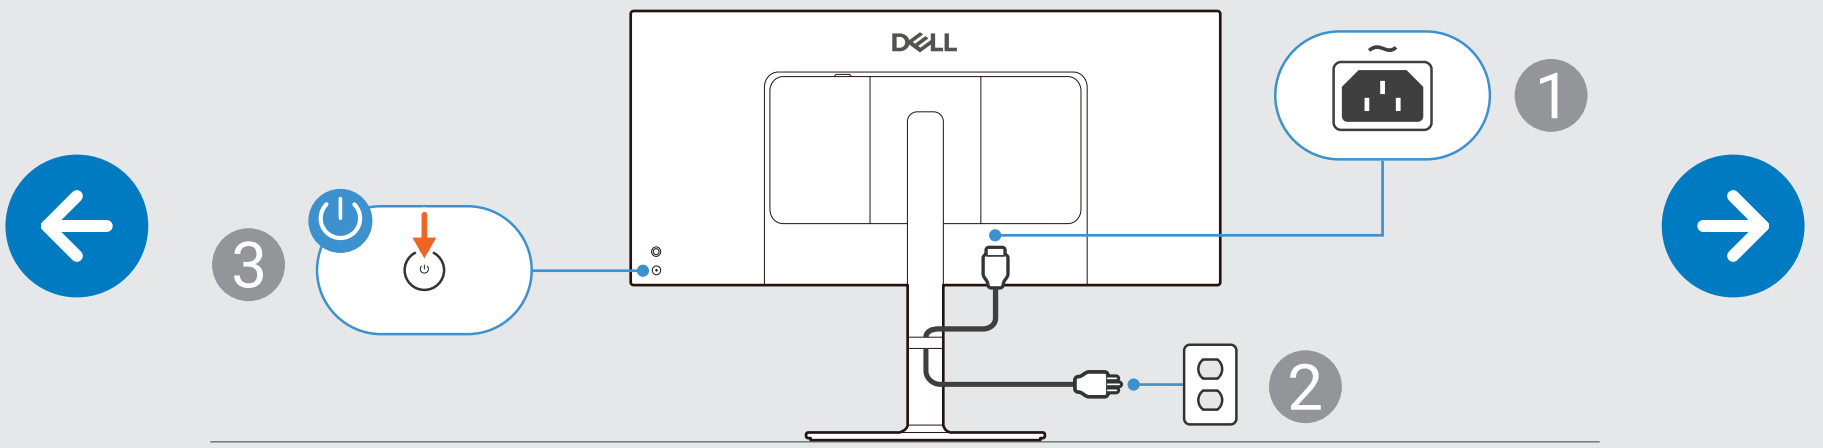




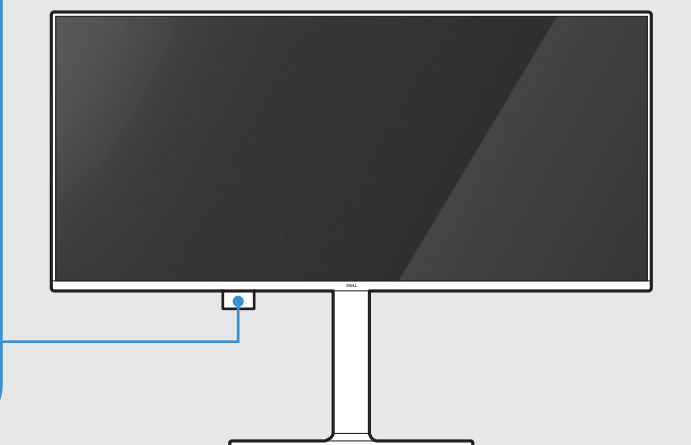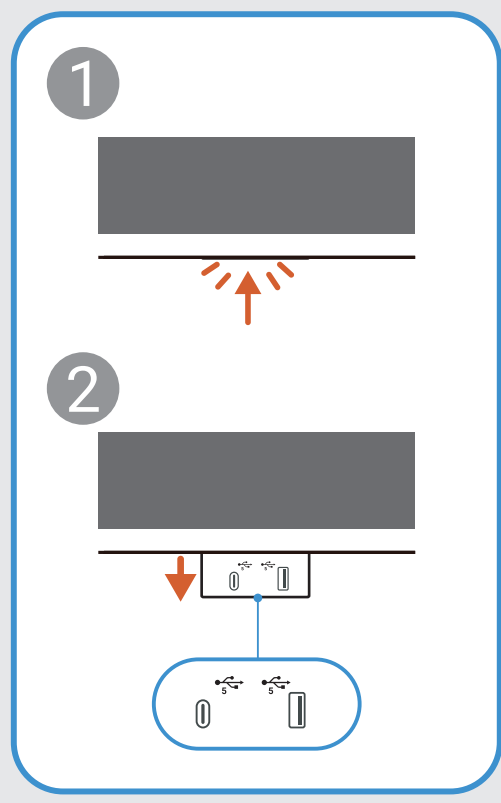

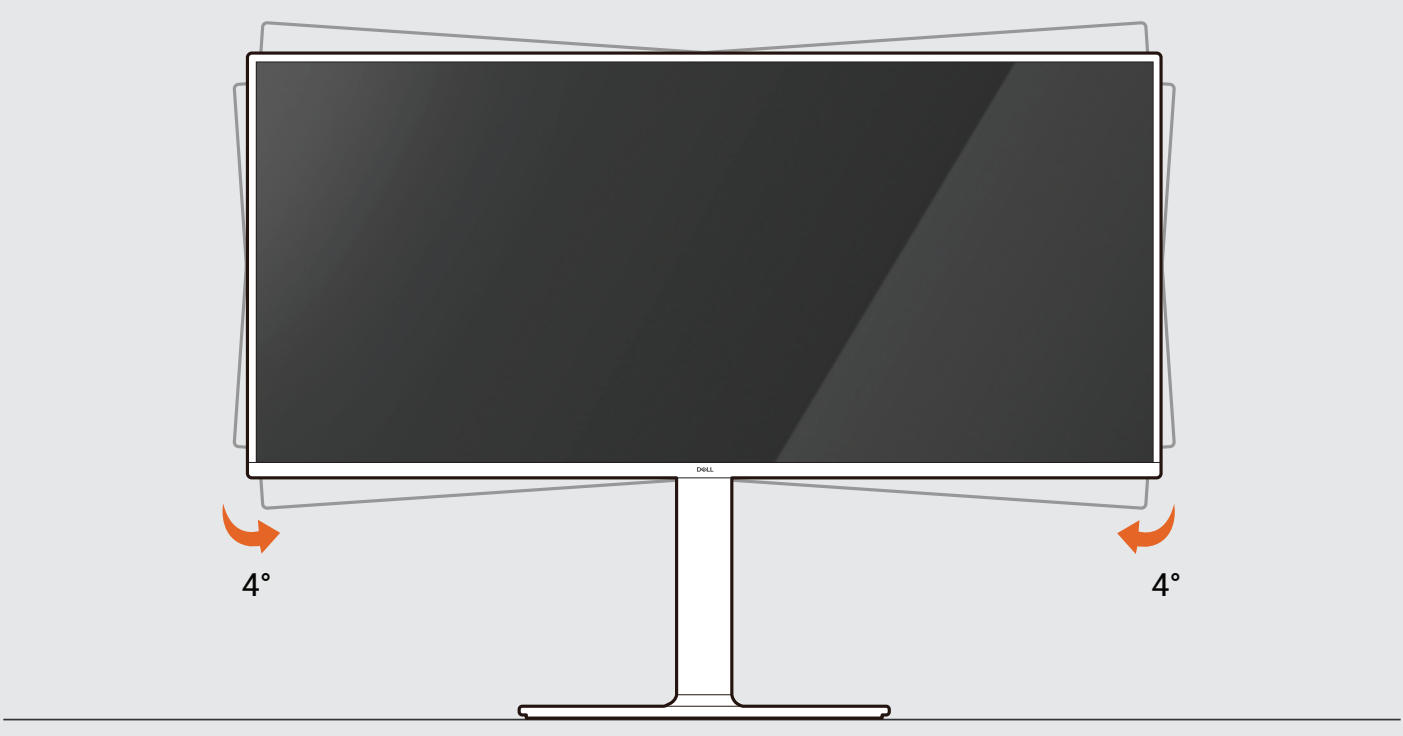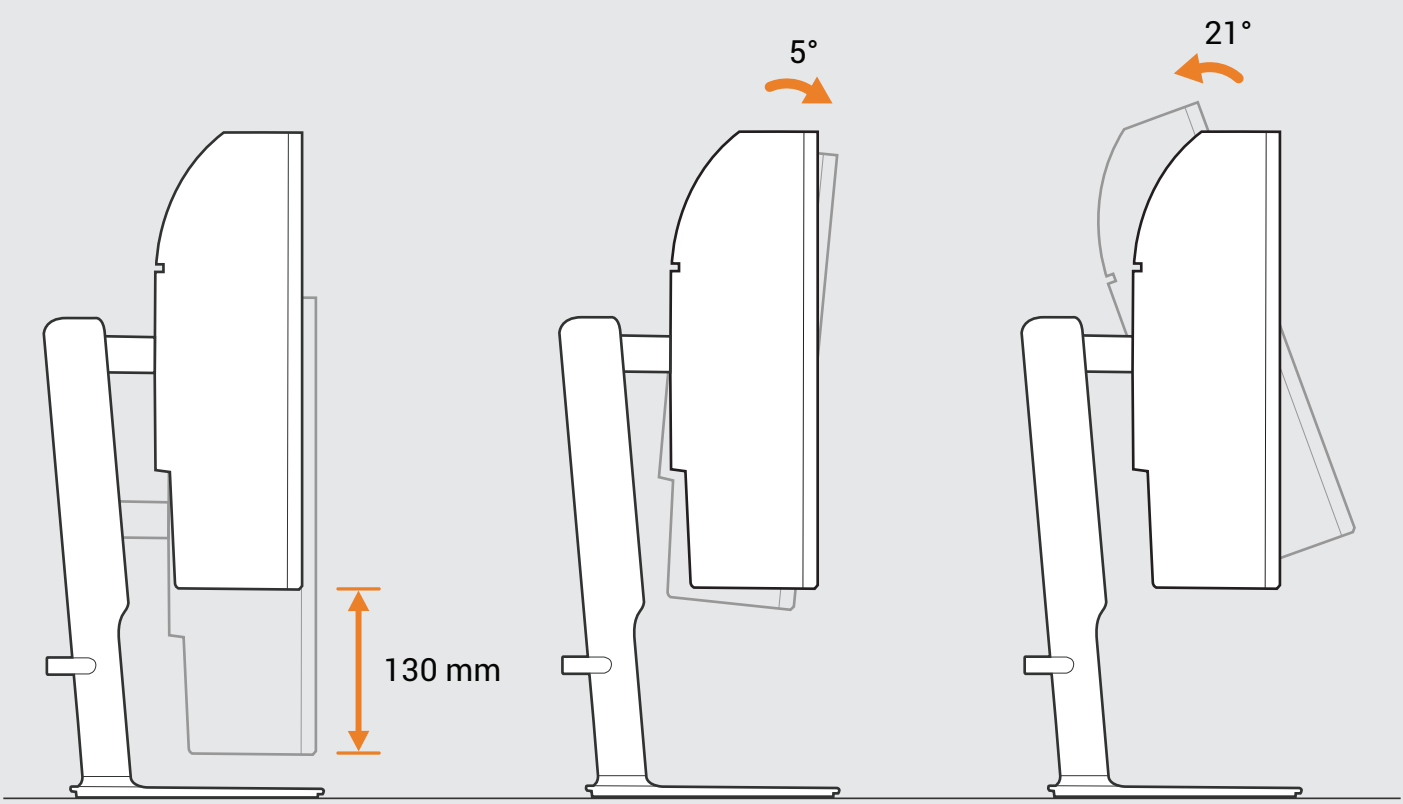

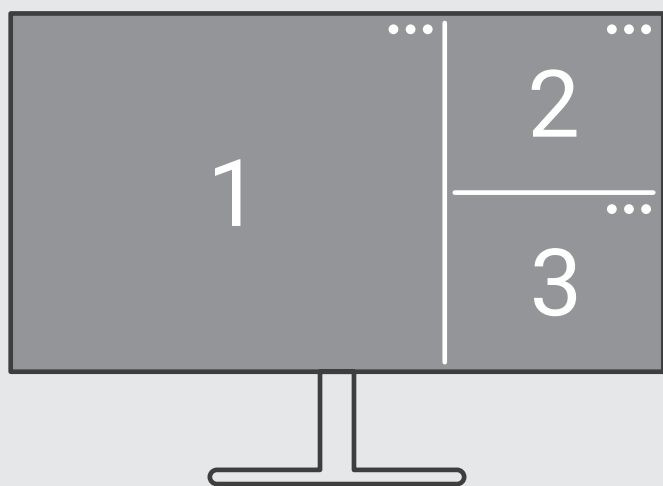

Dell Display and Peripheral Manager  
[Dell.com/support/ddpm](https://Dell.com/support/ddpm)

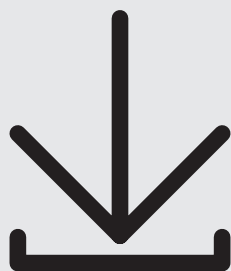

[Dell.com/support/S3425DW](https://Dell.com/support/S3425DW)